

### ATTENZIONE - ATTENTION - ACHTUNG

- Per lo smontaggio degli utensili utilizzare sempre la chiave di contrasto come indicato nel manuale d'uso.
- For disassembly of the tools use always the contrast key as mentioned in the user instructions.
- Fuer das Abmontieren der Werkzeuge immer den Gegenschlüssel benutzen wie in der Bedienungsanleitung erwaeht.

• Chiave inclusa

• Key included

• Schlüssel inbegriffen

Cod. MT	Mandrino Spindle Spindel	I	RPM	Coppia Max Max Torque Max Drehmoment	Reversibile lato mandrino/contromandrino Reversible sub/main spindle side Umkehrbare Spindel-seite/ Gegenspindel-seite	Lubr.interna Coolant through Innenkuehlung	Lubr.esterna Ext. coolant Aussenkuehlung	A	B	CHIAVI NON INCLUDE Keys not included Schluessel nicht einbegriffen	
MNZ0470116	ER16	1:1	12000	40Nm	X	-	X	86	55.5	CHSTER16	MNZ0410005 •
MNZ0470125	ER25	1:1	12000	40Nm	X	-	X	88.4	55.5	CHSTER25	MNZ0410005 •
MNZ0470225	ER25	1:1	12000	40Nm	X	P=70bar	X	88.4	68	CHSTER25	MNZ0410005 •
MNZ0470132	ER32	1:1	12000	40Nm	X	-	X	91.4	55.5	CHSTER32	MNZ0410005 •
MNZ0470232	ER32	1:1	12000	40Nm	X	P=70bar	X	91.4	68	CHSTER32	MNZ0410005 •

### DMG-MORI


NZ1500/2000 - NZX1500/2000 - NZX2500 (BMT40) - NL1500/2000/2500 20 STAZ. - NLX1500/2000/2500 20 STAZ. - NTX500 (BMT40)  
 NTX1000/2000 - NTX1000/2000/2500/3000 2ND GEN. - NRX2000 - ALC/ALX1500/2000/2500 (BMT40) - NZ DUE/TRE/QUATTRO (BMT40)

MODULO MOTORIZZATO ASSIALE 12000 RPM H=85mm

Axial driven tool 12000 rpm H=85mm

Axial angetriebenes Werkzeug 12000 rpm H=85mm

Subject to change without notice.

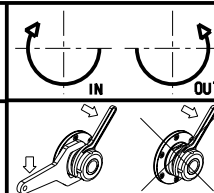

### M.T. srl

Via Casino Albini 480  
 Tel. 0541/956034-957884  
 Fax 0541/956341  
 47842 S. GIOVANNI IN M. (RN)  
 e-mail: mtma@tmarchetti.com  
 http://www.tmmarchetti.com



MNZ150-1-11